



## WHEEL CLEANING AND MAINTAINANCE INSTRUCTION

### - BRIGHT/CLEAR COATED ALUMINIUM WHEELS -

1) Allow the wheel to cool before cleaning, never spray cold water on extremely hot wheels



2) Hose the wheels with normal water to sever any loose dust particles, if required employ luke warm water



3) Rinse thoroughly with normal water for a significant time period and leave it in free air to dry



4) Repeating the aforementioned steps may be necessary if the soil is heavy or strongly adherent



5) Do not use polished wheel cleaner, paste, soap or soap oil to clean clear/lacquer coated wheels to avoid any surface finish damage, doing so, will void the warranty



6) Do not clean with abrasive brushes, abrasives steel wool, scouring pads or similar tools



7) Do not use chemical substances to clean Bright/Clear Coated wheels, doing so, will void the warranty

